

330 SETTINGS

Turn marked knob to “setup”.

Turn unmarked knob to select menu options.

Hold “SET” button (on upper left side of camera back), and turn unmarked button to step through the submenu options.

Live

O
5
10
30 (normal)
F

Dd/mm/yy

“set” button steps through units, rotating knob changes them.

Hld

(displays 0000 00) Knob steps 0 through 9, releasing and pressing “SET” steps through place holders. When stopped to Hld, knob toggles between Hld and Inc.

+/-

Knob steps from -0.9 to +1.9 (normal = 0.0)

AF

AF (Auto focus, manual focus)

Wb

STD (normal)
OPT1
OPT2

ISO

Knob toggles between a bar and no bar. (normal = no bar)

SELF

Knob toggles between self-timer and no self-timer.

QuAL

HI
FINE
NORMAL (normal)
BASIC

Pr

Knob toggles between PREV and blank. (normal = PREV)

FL

Knob toggles between 640 and 1280. (normal = 1280)

IMG

Knob toggles between SE and CL. (normal = Se)

ZM

Knob toggles between 2X and blank. (normal = blank)

bW

Knob toggles between B/W and blank.

Left side top of camera body has 3 silver buttons. The two most forward pressed together initialized the PC Card. The most forward button pressed alone, turns off the flash. (A “no flash” symbol appears on the LCD”).

There is a rocking lever directly behind the marked knob, it sets the zoom. Hold it up until the lens comes to rest (full wide angle) for facial photos.